

Battery Replacement Chart

Battery #	Replaces #
317	SR 516 SW
319	SR 527 SW
335	SR 610 SW; SR 512 SW
344	350; 343; SR 11365 SW
357	303; AG 13; SR 445 W
362	361; SR 721 SW
364	363; 364A; AG 1; SR 621 SW
371	370; SR 920 SW; SR 920 W
373	AG 4; SR 914 SW; LR 66
377	376; SR 626 SW; AG 4
379	SR 521 SW
381	391; SR 1120 W
386	301; AG 12; SR 43 W
389	390; AG 10; SR 1130 W
392	37; 392A; AG 3; 384
393	16; AG 5; SR 48 W; 398
395	399; SR 927 SW
397	396; SR 726 W
CR 1025	L 44;
ECR 1120	
ECR 1216	
CR 2015	
CR 2016	
CR 2032	